

Tipo	A	B	C	D	E	F	F1 [kN]	F2 [kN]	H	H1	HW min.	HW max.	I	K	L1	L2	M	N	O	P	α	α^*	Parafusos de aperto
1	5	34	14	4,5	19	8	0,8	1,1	47	132	-1,5	5,5	10	10	60	58	20,0	30	5	30	105°	-	M5x30
2	6	40	20	5,5	25	9	1,0	1,2	61	180	2,0	11,0	12	6	78	63	25,5	38	5	32	105°	60°	M6x35
3	8	65	24	6,5	43	11	1,4	2,5	71	243	6,0	18,0	18	7	112	111	28,5	43	6	38	105°	60°	M8x45
4	10	84	32	8,5	50	17	2,0	3,0	102	280	11,0	40,0	20	54	140	129	32,0	52	8	96	105°	60°	M8x65

* O ângulo de abertura pode ser alterado quando se pressiona o pino stop.

